


HEATED SOCKS

INSTRUCTIONAL MANUAL

Read instructions before operating.
Retain for future reference.

TABLE OF CONTENTS

 Important safeguards	2
Additional important safeguards	3
Notes on the batteries and charger	3
How to charge	4
Getting to know your heated socks	5
Before using for the first time	5
Operating instructions	6
Care and cleaning instructions	7
Storing instructions	7
Trouble shooting	7
Warranty	8

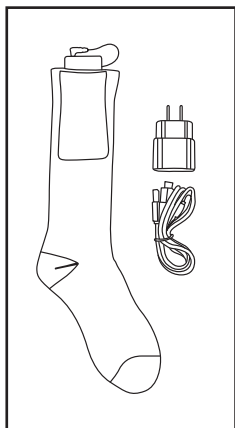

Thank you for purchasing *Pêlerin* outdoors heated socks.

Please visit our website at : latulippe.com to find more informations about this heated product.

1

ADDITIONAL IMPORTANT SAFEGUARDS

HEALTH WARNING : Immediately remove heated socks and discontinue its use if you experience any discomfort or if the heated socks become uncomfortably hot.

- Do NOT use if you have a pacemaker or defibrillator.
- Consult your physician prior to use following any discomfort experience.
- Consult your physician prior to use if you :
 - Have a heart condition
 - Have diabetes
 - Have circulatory problems
 - Have sensitivity to heat
 - Are pregnant
- A person who has not read and understood all operating and safety instructions is not qualified to operate the heated socks.
- If the heated socks begin to malfunction during use, immediately remove heated socks from feet, turn off batteries and disconnect battery from heated socks socket.

NOTES ON THE BATTERIES AND CHARGER

Figure 1.

Battery type	PowerBank 2400 - GLP3724A
Battery capacity	2400mAh/8.88Wh
Battery storage	Store between 5 and 30°C (41-86°F)
Heat times (estimated)	High - 4 H ; Medium - 6 H ; Low - 12 H
Charger	Sector input 110-240, output 5,4V / 1,5 A
Charging time	Up to 4 hours (both batteries)

3

IMPORTANT SAFEGUARDS

When using your *Pêlerin* heated socks, basic safety precautions should always be observed, including the following : **WARNING : TO REDUCE RISK OF FIRE, OVERHEATING, ELECTRICAL SHOCK OR INJURY : READ ALL INSTRUCTIONS BEFORE USING YOUR PÊLERIN OUTDOORS HEATED SOCKS. ALWAYS KEEP BATTERIES OUT OF REACH OF CHILDREN.**

- Use the heated socks only for their intended use.
- Heated socks are for adult use only. Children should be supervised to ensure they do not play with the heated socks, batteries or charger.
- Do not submerge the heated socks in water or any other liquid while wearing them.
- Keep the batteries dry at all times as this ensures safety and reliability. If a battery gets wet, do NOT turn it on. Allow the battery to completely dry in a dry, cool space and then try reactivating the battery before inserting into battery pocket. As with any electrical item, battery may be damaged if submerged in water.
- Do not cut, tear or puncture the lining of the heated socks. The heating element is housed within the lining and any damage to the lining may cause the heated socks to malfunction or cause injury.
- Do NOT disassemble the batteries, charger or heated socks. Any disassembly may result in a malfunction, damage or injury.
- If battery is cracked, broken, cut or ruptured, avoid contact with skin and immediately discard.
- When in operation, the powered up batteries may affect compasses and other magnetic devices.
- Do NOT operate battery and charger with damaged plug, power cord or heated socks malfunctions or any component that has been damaged in any manner. Immediately discontinue using heated socks.
- Do NOT handle the polarized plug of the charger with wet hands.
- Keep all components used with your heated socks away from fire or any other significant heat source.
- Store heated socks and components indoors in a dry, cool space within a temperature of 41 °F (5 °C) and 86 °F (30 °C). Performance may be negatively impacted if heated socks are frozen or stored in extreme cold. If this occurs, thaw or warm up heated socks before activating.
- Do not charge batteries while in the heated socks.
- We recommend that you fully charge the heated socks prior to storage if your intention is to store your heated socks for long time periods (such as from one cold season to the next).

2

When using your *Pêlerin* heated socks, basic safety precautions should always be observed, including the following :

HOW TO CHARGE

Prior to first time use, fully charge both batteries. The time needed to fully charge both batteries is approximately 3.5 to 4 hours. You can charge each battery individually or together. However, if you commence with charging only one battery, do not plug in second battery during this charge cycle as this may cause damage to the batteries. Change both batteries before charging the other. Do not charge batteries while in the heated socks.

To change a battery, insert the plug into any standard electrical outlet. Ensure the plug correctly fits into the outlet. **DO NOT** modify the plug in any way. Insert one plug connector into a battery socket and then insert the second plug connector into the other battery socket. Allow batteries to charge for required time (see figure 1). Once charged, remove plug from electrical outlet and disconnect the plug connector from the battery socket.

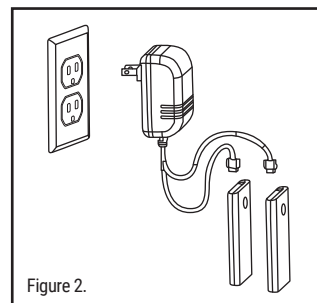


Figure 2.

Each battery will show four blue lights while charging. The number of illuminated blue lights will indicate the charge level of the battery. To ensure full charge, do not prematurely disconnect the battery and charge the entire duration time, as specified on figure 1. Do not charge beyond this specification, this could drain the battery.


4

WHEN TO RECHARGE? For best results, fully charge each battery prior to each use. It is best to recharge batteries within 48 hours of use. Also, fully charge batteries before storing for extended time periods as PowerBank 2400 batteries do discharge over time.

GETTING TO KNOW YOUR HEATED SOCKS

Product may vary slightly from illustrations.

Figure 3.

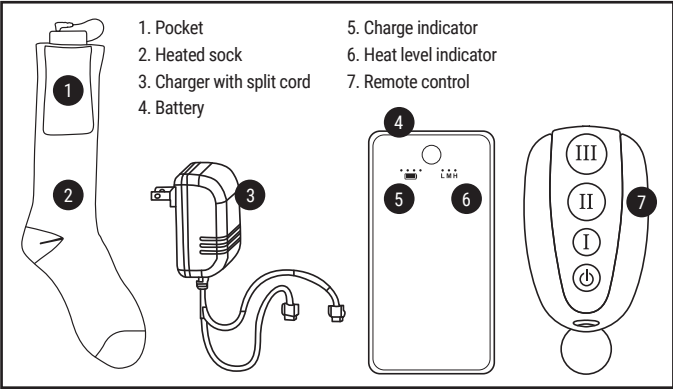

BEFORE USING FOR THE FIRST TIME

- 1. Carefully unpack the heated socks and accessories.
- 2. Remove all parts from the carton and familiarize yourself with all the components. Make sure all components and accessories are present before discarding packing materials (see figure 3).
- 3. Visually inspect all components for damage. If any component is damaged in any way, **DO NOT** operate heated socks.
- 4. Fully charge batteries (see instructions on how to charge the batteries and figure 2).

CARE AND CLEANING INSTRUCTIONS

- 1. Remove batteries from the pockets.
- 2. Machine wash the heated socks in a delicate mode (tuck cord inside pocket).
- 3. Hang heated sock for drying.
- 4. **DO NOT** dry clean. **DO NOT** bleach. **DO NOT** tumble dry. **DO NOT** iron.
- 5. Keep batteries and charger away from water at all times.
- 6. Make sure heated sock is 100% dry and pockets are debris-free prior to reconnecting battery to the heated sock.



STORING INSTRUCTIONS

- 1. Never store the batteries while plugged into the charger. Remove the battery from the charger and remove the plug from the electrical outlet.
- 2. Disconnect battery from the heated sock and store separately.
- 3. Store heated socks, batteries and charger indoors, in a dry, cool space within a temperature range of 5 to 30 °C (41-86°F).
- 4. Never store heated socks while still hot. Allow heated socks to cool completely prior to storing.
- 6. **DO NOT** store in extreme cold conditions and prevent heated socks from becoming frozen as this will hurt performance and may cause damage.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
Heated sock is not warming.	Battery has no power.	Fully charge battery.
Heated sock is not warming.	The heated sock is not connected to the battery.	Connect the heated sock's wire to the battery.

OPERATING INSTRUCTIONS

ASSEMBLY & ACTIVATION :

- 1. Open socket of the heated socks (see figure 3). Make sure inner pocket is completely dry and free of any debris.
- 2. Gently reach into pocket and locate the heated sock connector plug.
- 3. Attach the connector plug to the battery connector socket by pushing firmly together.
- 4. To turn on battery power, press the battery button for 1 second to determine the heat level, "high", "medium" or "low".
- 5. Gently insert battery into pocket.

TEMPERATURE ADJUSTMENT :

- 1. The heated sock has "high", "medium" and "low" settings. To change the heat setting, open the pocket.
- 2. Press the battery button for 1 second to determine the heat level.

TO SHUT DOWN :

- 1. To power off, open the socket.
- 2. Press the battery button for 2 seconds to turn off the battery.

TO RECHARGE :

- 1. Open pocket.
- 2. Disconnect battery from heated sock connector plug.
- 3. Remove battery from the pocket.
- 4. Fully charge batteries (see instructions on how to charge the batteries and figure 2).

LIMITED SIX MONTHS WARRANTY

PÉLERIN hereby warrants that for a period of six (6) months from the date of purchase, this product will be free from mechanical defects in materials and workmanship and for ninety (90) days in respect to non-mechanical parts. At its sole discretion, PÉLERIN will either repair or replace the product found to be defective, or issue a refund on the product during the warranty period. Any refund to the customer will be at a pro-rated value based on the remaining period of the warranty.

The warranty is only valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt, as proof of purchase is required to obtain warranty validation. The terms and conditions of this warranty cannot be altered, modified or in any way revised by any retail store, other business or individual.

EXCLUSIONS : The warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use of the product, use of improper voltage or current, improper routine maintenance, use contrary to the operating instructions, disassembly, repair, or alteration by anyone other than qualified PÉLERIN personnel. Also, the warranty does not cover acts of God such as fire, floods, black holes, hurricanes or tornadoes.

PÉLERIN shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Apart from the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in time to the duration of the warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitations may not apply to you. The warranty covers specific legal rights which may vary by state, province and/or jurisdiction.

HOW TO OBTAIN WARRANTY SERVICE : You must contact customer service at our toll-free number : 1 877 529-0024 ext. 284

A customer service representative will attempt to resolve warranty issues over the phone. If the customer service representative is unable to resolve the problem, you will be provided with a case number and asked to return the product to PÉLERIN. Attach a tag to the product that includes: your name, address, daytime contact telephone number, case number and description of the problem. Also, include a copy of the original sales receipt. Carefully package the tagged product with the sales receipt and send it (with shipping and insurance prepaid) to PÉLERIN's address. PÉLERIN shall bear no responsibility or liability for the returned product while in transit to PÉLERIN's customer service center.

Pélerin, 637, rue St-Vallier Ouest, Québec, QC G1N1C6, Canada.

If after having read this leaflet, you have any questions or comments on your products, call 1 877 529-0024 ext. 284 (from 8h30 to 17h30, E.S.T.)